


- Onderdelen –
- Spare parts –
- Pièces de rechange –
- Ersatzteile –

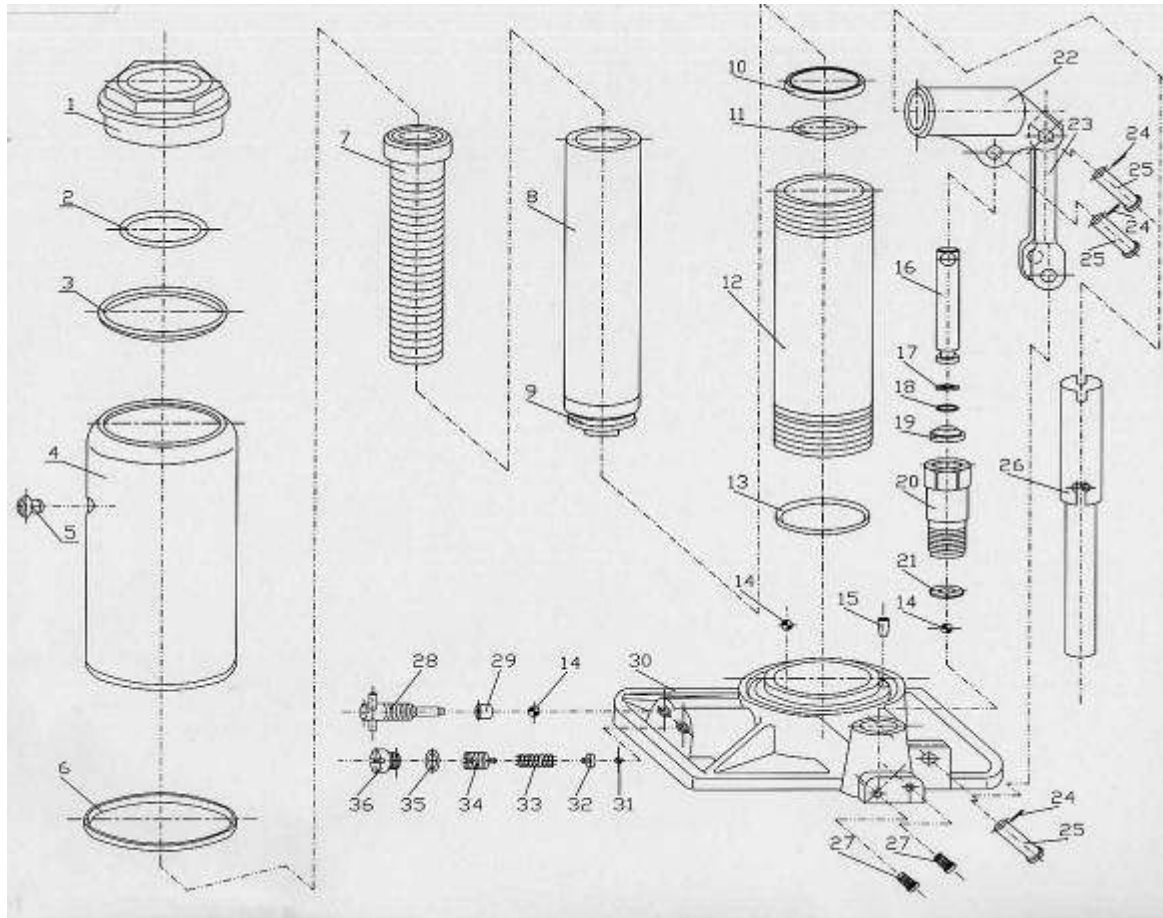

Y412001

Pos.	Art. Number	Description	Pos.	Art. Number	Description
1	Y412001-01	Top Nut	19	Y412001-19	Dust Wiper
2	Y412001-02	O-Ring	20	Y412001-20	Pump Cylinder
3	Y412001-03	Nylon Gasket	21	Y412001-21	Copper Gasket
4	Y412001-04	Oil Tank	22	Y412001-22	Handle Socket
5	Y412001-05	Oil Plug	23	Y412001-23	Linkage
6	Y412001-06	Square Seal	24	Y412001-24	Cotter Pin
7	Y412001-07	Extension Screw	25	Y412001-25	Axle
8	Y412001-08	Ram	26	Y412001-26	Handle Assembly
9	Y412001-09	Piston	27	Y412001-27	Oil Stopper
10	Y412001-10	U-cup Ring	28	Y412001-28	Release Valve
11	Y412001-11	O-Ring	29	Y412001-29	Square Seal
12	Y412001-12	Cylinder	30	Y412001-30	Base
13	Y412001-13	Square Seal	31	Y412001-31	Steel Ball
14	Y412001-14	Steel Ball	32	Y412001-32	Stud
15	Y412001-15	Dust Wiper	33	Y412001-33	Compression Spring
16	Y412001-16	Pump Plunger	34	Y412001-34	Pressure Screw
17	Y412001-17	Snap Ring	35	Y412001-35	O-Ring
18	Y412001-18	O Ring	36	Y412001-36	Safety Screw
			*	Y412001-RK	Repair Kit